

Set up Instructions

Electronic Two Zone Tap Timer

néta



The UP arrow moves the curser up the screen.



The DOWN arrow moves the curser down the screen.



The +PLUS button increases the time and moves the curser to the right.



The -MINUS button decreases the time and moves the curser to the left.

Instructions for programming the timer:

Set the current time

TIME

Press the UP arrow button until the time flashes on the TIME mode.

Press the +PLUS or -MINUS button to increase/decrease to your current time.

Press the DOWN arrow button to accept it.

Select the water zone

ZONE

Press the UP arrow button to select the ZONE mode.

Press the +PLUS or -MINUS button to select zone 1 or zone 2

A square around the zone number represents the zone selected **1** **2**

Press the DOWN arrow button to accept it.

Set the time to start watering

START WATER

The START WATER mode should now be flashing.

Press the +PLUS or -MINUS button to increase/decrease to your required watering time.

Press the DOWN arrow button to accept it.

Set the duration time

WATER FOR

The WATER FOR mode should now be flashing.

Press the +PLUS or -MINUS button to increase/decrease to your required watering time.

Press the DOWN arrow button to accept it.

Set how often to water

WATER EVERY

The WATER EVERY mode should now be flashing.

You can choose from every 4/6/8/12 hours or 1-7 days (daily watering) press the +PLUS or -MINUS button to increase/decrease to your required watering.

Press the DOWN arrow button to accept it.

Set up Instructions

Electronic Two Zone Tap Timer

nēta

Start the program

PROGRAM

The PROGRAM mode should now be flashing.

Press the +PLUS button to select ON.

Press the DOWN arrow button to accept it.

Stop the program

PROGRAM

To stop a program press the UP arrow button until the PROGRAM mode starts flashing.

Press the -MINUS button to select OFF.

Press the DOWN arrow button to accept it.

Manual watering

MANUAL

Water manually from the tap at any time.

Press the DOWN arrow button until the MANUAL mode starts flashing.

Press the +PLUS button to turn the manual mode ON, keep pressing to increase the watering duration.

Press the DOWN arrow button to accept it.

Wait 3 secs you should see a tap symbol  and hear a click sound to confirm the valve opening. You should hear the same click sound at the end of watering when the valve closes.

Rain Delay Function

RAIN DELAY

In the event of expected rainfall you can suspend automatic watering for up to 7 days.

Press the DOWN arrow button and scroll to RAIN DELAY mode.

Press the +PLUS button for how many days you want to delay your normal watering.

Press the DOWN arrow button to accept it.

The program will go back to normal at the next cycle after the end of your delay period.

TROUBLESHOOTING

Possible cause

No water flow or valve not opening/closing

Remedy

Remove the timer from the tap.

Arrow DOWN to manual watering and press the +PLUS button to turn the manual mode ON.



Wait 3 seconds, you should hear an audible 'click' indicating the valve opened and the tap icon as below.

Now press the -MINUS button to turn the manual mode OFF. Wait 3 seconds, you should hear another audible 'click' indicating the valve closed.

Repeat these steps up to 3 or 4 times to check the valve is operating.

This function should clear any possible air locks.